
StingRay Series Visual Guide

Covering RigLits and StingShot-Stinger-StingRay Configurations



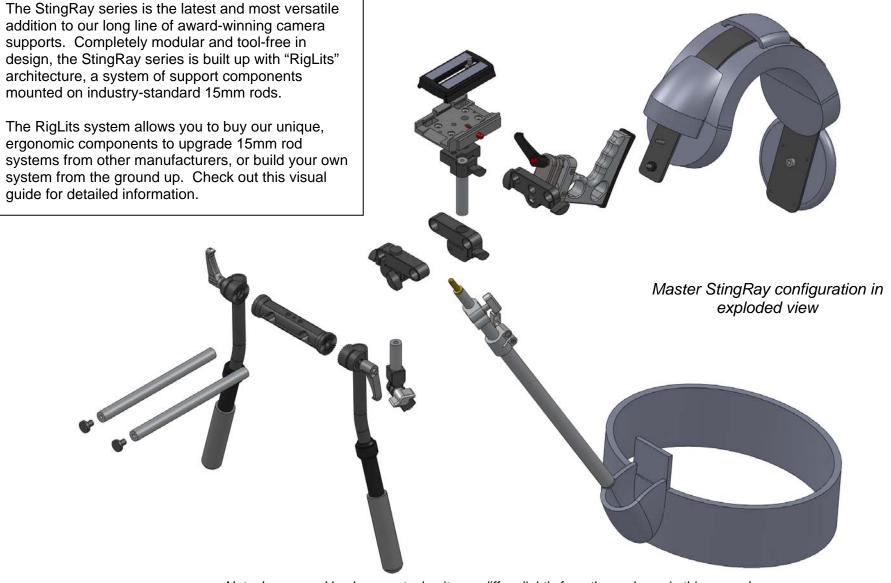

Note: Levers and knobs on actual unit may differ slightly from those shown in this manual



The StingRay series modular support is designed with several attributes in mind: flexibility, compatibility, portability, and reliability. Based on standard 15mm rods, the StingRay series builds up using the RigLits system, which allows you to buy components (RigLits) incrementally to configure own support or add our components to another manufacturer's 15mm rod-based system.

There are 5 recommended configurations, all of which are available with the master StingRay system. In other words, if you buy the VZ-StingRay, you can configure it into at least 5 setups (each shown on the previous page), and the entire system breaks down neatly for compact storage and transport without the use of any tools. The StingShot and Stinger I, II, & III are each capable of fewer configurations than the master StingRay, but each system can be purchased as a turnkey product and upgraded through the purchase of **RigLits (below)**:



WARNINGS:

- Always tighten all locking knobs and attach rod endcap screws before operating the unit – failure to do so could result in accidental separation of components and damage to your camera.
- 2) Always tighten the locking knobs on the suspension pod when storing and handling. Only unlock the knobs when the suspension pod has been properly mounted into the belt holster and the articulated socket on the fully assembled StingRay/Stinger camera support. Also make sure the endcap screw is attached to the short mounting rod on the articulated socket.

Setup and Configuration


The RigLit system allows for great flexibility in how your support can be configured and adjusted. We recommend using the systems in one of the 5 configurations depicted in this manual. You should be able to assemble the system by using this manual as a visual guide.


If you are using one of our RigLits to upgrade a support from another manufacturer, please make sure you continue to adhere to any warnings or special instructions given by the manufacturer.







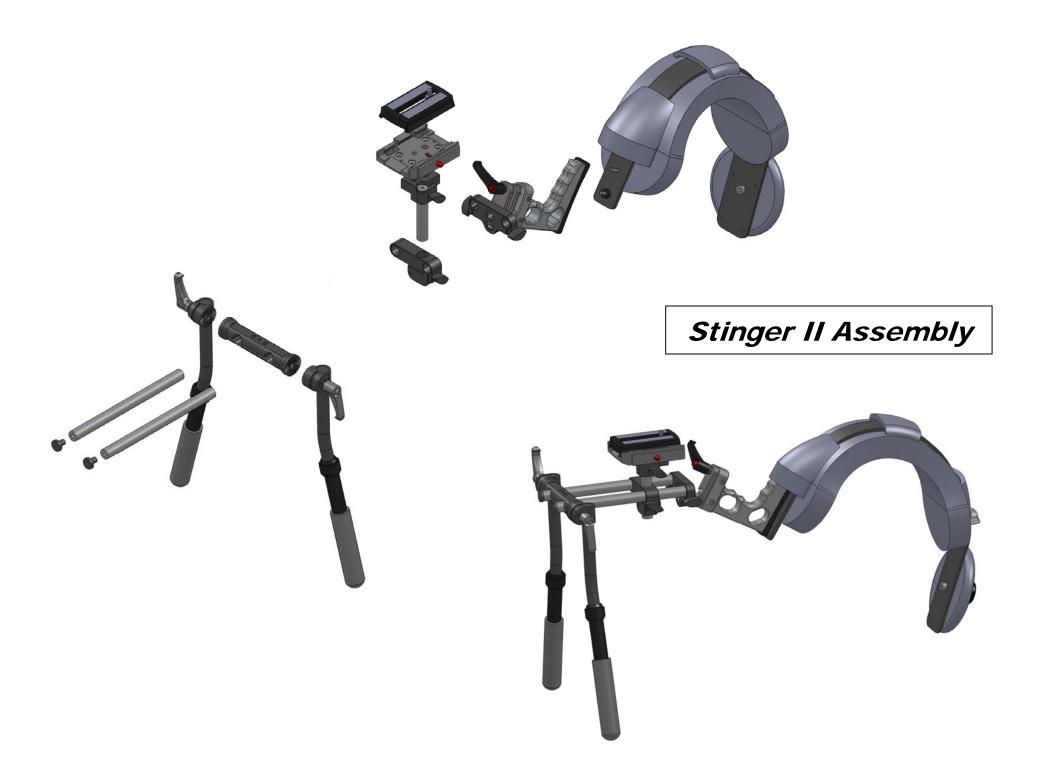

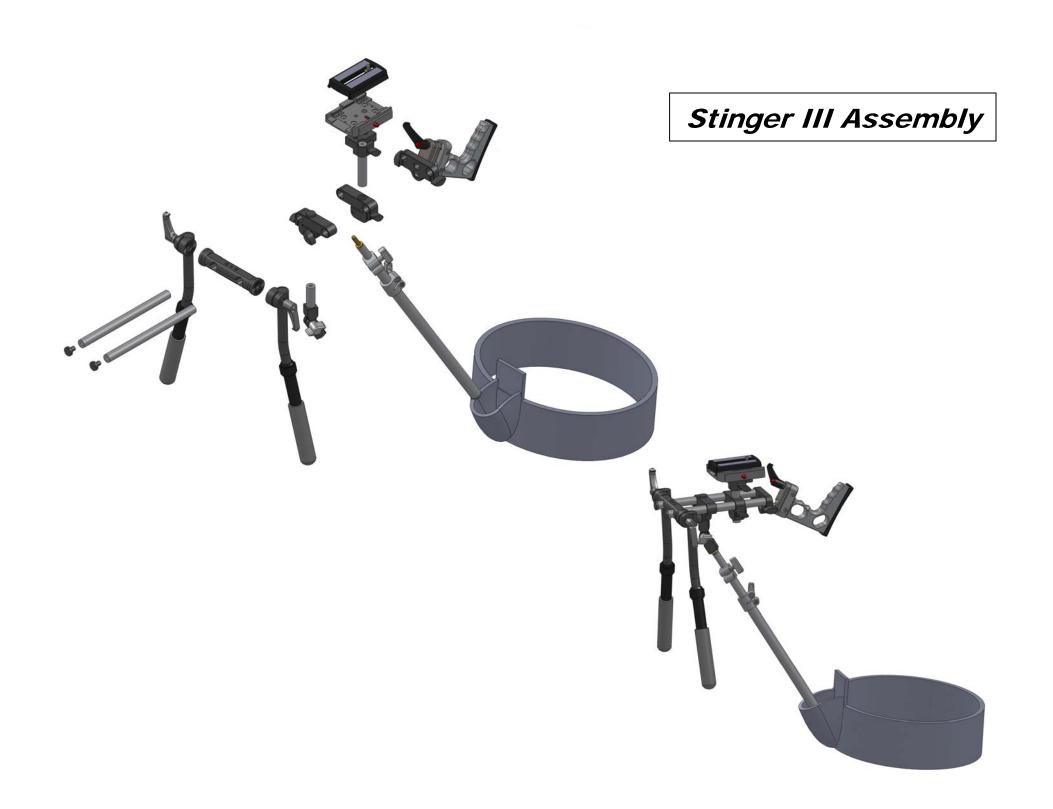



StingRay Assembly

Warranty: 2 years for parts and labor, covering defects in manufacturing or workmanship. Warranty does not cover lost or damaged parts

If you have questions or comments, please feel free to contact us!

www.varizoom.com

512-219-7722

