

VZ-DigiView

LCD Viewfinder for DSLRs

Varizoom

Contents:

- Viewfinder body w/ integrated lens and diopter adjustment (-2.75)
- Oversize soft rubber eyecup
- Camera-specific LCD window frame(s)
- Camera mounting plate w/ captive 1/4"-20 camera screw and 1/4"-20 thread mounts for attachment to tripod or support
- Screws: (1) Low-profile 1/4"-20 screws (2x, + 2 extra) for mounting LCD window frame to camera mounting plate, (2) Flat 6-32 x 3/8" (3x, + 3 extra) flat screws for mounting LCD window frame to Viewfinder body
- 1/8" hex key, 5/64" hex key
- Carrying pouch

Assembling and using your DigiView is simple. Start by attaching the appropriate LCD window frame to the camera mounting plate using 2 of the low-profile 1/4"-20 screws. Attach as pictured to the right.



This L-shaped assembly will then attach to the Viewfinder body using 3 of the 6-32 x 3/8" flat screws.

Attach the rubber eyecup to the ring around the Viewfinder lens.

Mount the complete DigiView assembly to your camera.



Turn on the camera and activate the LCD screen. Now look through the eyecup and see if your image is in focus. Adjust the diopter ring if necessary.

Use only a non-abrasive lens cloth and cleaner to wipe the lens.

2 year warranty against defects – DOES NOT COVER DAMAGE OR LENS SCRATCHES – www.varizoom.com

