

Varizoom

www.varizoom.com

DV Traveler

Assembly & Operation

Contents of Kit: 1) Shoulder Arch 2) Handle Assembly 3) Spring Pod 4) Belt 5) Accessory Mount 6) Quick-Release Plate

The telescoping shoulder arch can be positioned to the ideal length and angle, while the belt and spring pod help stabilize your shot. The accessory mount allows you to attach lights, mics, XLR adapters, or anything you want with a 1/4"-20 mounting screw.

1. The unit comes partially pre-assembled and folded down flat for shipping and storage. Loosen the single wing knob w/ coil spring (**A**) until you can swing the knob down and tighten to "lock" the rig into shooting mode. When this knob is loose, you can adjust the side-to-side position of the camera platform, as well as the angle of the handles.





2. Attach the quick-release plate to your camera and set aside. Wrap the belt around your waist with the holster in front.

3. Loosen the knurled aluminum knob (**B**) located on the center of the handle assembly, but leave it attached. Slip the rod end of the shoulder arch into the opening of the knob, adjust to desired length & angle, and tighten the knob.

4. Insert lower end of the spring pod through the d-clip and into the holster on the belt (**C**).

Slide the brass tip of the support pod into the coil spring attached to the single wing knob (**D**).

5. Attach your camera to the quick-release baseplate. Attach your accessories to the accessory mount (if required) (**E**), then position your camera side-to-side for balance. Loosen the spring pod knobs one at a time to set the proper amount of spring action.

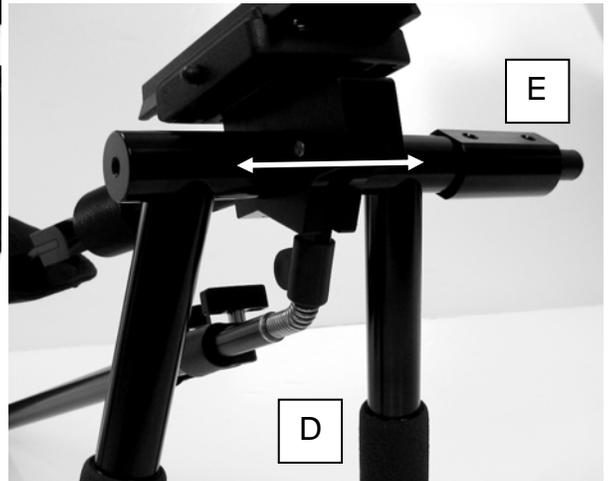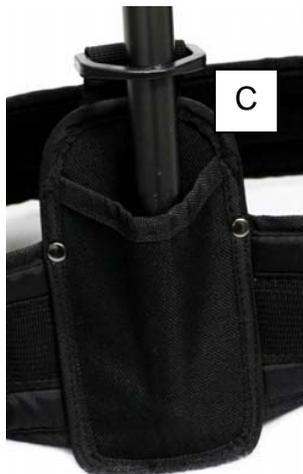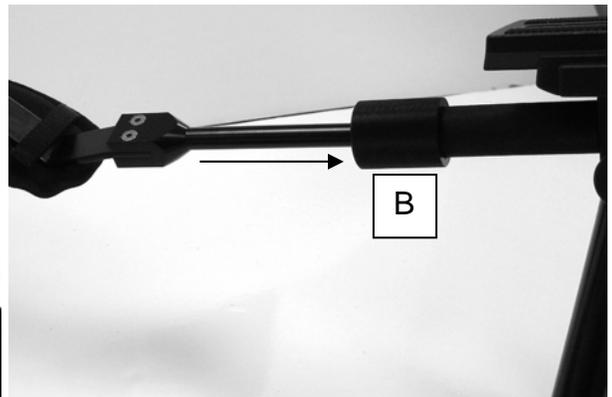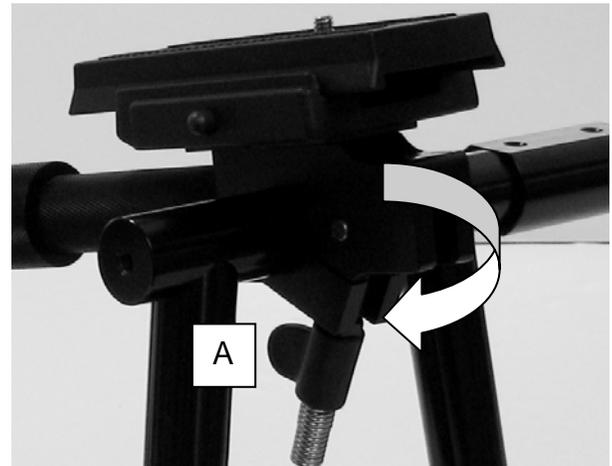

Warranty

This product is covered by a two year factory warranty covering any defects in materials or workmanship.